



AIR POWER SMOOTH AS6400A

SAFETY CAUTIONS

- Original instructions. Read these safety precautions carefully before using the unit! This appliance should only be used as described within this instruction booklet. Please retain for future reference.

HEAT MAT/ ELASTICATED FASTENING	Contains Natural Rubber
--	------------------------------------

WARNING! THIS APPLIANCE GETS HOT!

- **ALWAYS** keep out of reach of children (during and after use and whilst cooling).
- Always take extra care if used on children or near children.
- Do not use on very young children.

IMPORTANT SAFETY

- **UK Only:** This appliance must not be used in the bathroom.
- **Outside the UK:** If using the appliance in a



bathroom, unplug after use as the proximity of water can be dangerous even if the appliance is switched off. For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

- **WARNING!** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Do not immerse the appliance into water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, discontinue use immediately. Contact the Conair Customer Care Line (refer to 'ANZ Customer Service' section for further information).
- Do not use the appliance if the lead is damaged. In the event of damage, discontinue use immediately. If the lead is damaged it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'ANZ Customer Service' section for further information). No repair must be attempted by the consumer.
- Do not leave the appliance unattended when switched on or plugged in.
- This appliance is equipped with a safety thermostat. In the event of overheating the appliance will either stop automatically or run hot and cold intermittently. Should this happen, slide the  switch to the 'off' position,

unplug and allow to cool for 10 minutes. Before use, ensure the rear filter is clear of hair and other debris. Plug in and switch on. If the appliance continues to overheat discontinue use immediately, switch off and unplug, and contact the Conair Customer Care Line (refer to 'ANZ Customer Service' section for further information).

- Take care that the air vents do not become blocked when in use. Ensure the rear filter is clear of hair and other debris before use.
- Always ensure that the rear air filter is kept away from hair during use to prevent it being dragged into the fan which may cause the appliance to overheat.
- Take care using this appliance when wearing jewellery, in particular necklaces and earrings to avoid catching in the brush heads.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand, the hazards involved. Children shall not play with the appliance. Cleaning and maintenance shall not be made by children without supervision.
- Allow the appliance to cool before storing away.
- After use, do not coil the lead around the appliance as this may cause damage to the lead. Instead, coil the lead loosely by the side of the appliance.
- Do not use any accessories other than those

recommended by BaByliss.

- Always unplug the appliance when not in use or before cleaning.
- This product complies fully with all appropriate EU and UK Legislation and the Standards relevant to this type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact the Conair Customer Care Line. (See 'ANZ Customer Service' section for further information).

INSTRUCTIONS FOR USE

- Ensure hair is towel dried and combed through to remove excess water and any tangles. Divide the hair into sections ready for drying / styling.
- Slide the power switch up to the on position marked 'ⓘ' and select a temperature and airflow setting suitable for your hair type.

Note: The blue LED light will illuminate at the bottom of the bristles to indicate the anti-frizz ionic feature is activated.

- Gently glide the brush head through the section creating tension and control through the hair to straighten the section as you dry.

IMPORTANT! Use the heat protection glove supplied to help protect the hand from temporary contact with the hot plate when assisting to glide the bristles through each section of hair.

- The auto-flow technology, automatically adjusts the direction of the airflow ensuring it is channelled down the hair in the direction of styling.
- For a lasting style, select the cool setting and brush through warm hair to set and smooth.
- Repeat for each section of hair.
- After use, slide the power switch 'ⓘ' down to the off position and unplug the appliance.
- Allow the appliance to cool before storing away.

Airflow / Temperature Settings

- There are 3 airflow and 4 temperatures including a cool setting.
- To set the airflow, press the button until the desired airflow speed is reached. A white LED will illuminate to indicate each of the three airflow speeds.
- To set the temperature, press the button until the desired temperature is reached. A red LED will illuminate to indicate each of the three heats.
- Press the button for a forth time to activate the cool setting – the 3x LED lights will change from red to blue.
- When choosing a temperature setting to dry and style your hair start with the lowest setting and increase as required. If you have delicate, fine, bleached or coloured hair, use the lower heat settings. For thicker hair, use the higher heat setting.
- Use the cool setting on warm hair to set your style

Anti-Frizz Technology

- Advanced ionic system with negative ions to eliminate frizz and fly-aways, and enhance softness and shine.
- Turning on the appliance will automatically activate the ionic technology.

Please note: The release of the ions from the ports produces a slight buzzing noise.

Ultra-Care Mode

To activate the Ultra-Care Mode press and hold down the temperature setting button for 1-2 seconds until the temperature LED lights alternate between red and blue to indicate the airflow is cycling between a hot and cool airflow. To turn off the Ultra-Care Mode function, press the temperature button once to return to your chosen heat setting.

Memory Function

- The memory feature stores your preferred temperature setting for ease of use and consistent results. The memory feature is automatically activated during use to store your preferred temperature setting.
- Once the desired temperature setting has been selected, the memory function will store the selected temperature for future use.

- When turning the appliance on next, the appliance will automatically select the temperature stored.
- To reset the temperature stored under the memory function, simply select a different temperature.

Removable Magnetic Filter

The removable magnetic inlet filter makes cleaning easy and therefore optimises the dryers airflow for fast drying performance.

Heat Mat

The appliance comes with a heat mat for use during and after styling. During use do not place the appliance on any heat sensitive surface, even when using the heat mat provided. After use, switch off and unplug the appliance. Immediately wrap the appliance in the heat mat provided and allow to fully cool down. Continue to keep it out of reach of children as it will remain hot for several minutes.

Heat Protective Glove

IMPORTANT! A heat protection glove has been supplied to help protect the hand from temporary contact with the hot plate when styling. Please note the heat protection glove is only designed to give initial contact protection. Discomfort will be caused with prolonged contact with the hot surface.

Care and Maintenance

To help keep your appliance in the best possible condition, follow the steps below:

- Ensure the appliance is switched off, unplugged and cool. To clean the outside of the appliance, wipe with a damp cloth. Make sure that no water enters the appliance and it is completely dry before use.
- Do not wrap the lead around the appliance, instead coil the lead loosely by the side of the appliance.
- Do not use the appliance at a stretch from the power point.
- Always unplug after use.

Cleaning the Removable Magnetic Inlet Filter

- To increase the lifespan of your product, it's important to keep the inlet filter clean.
- Ensure the appliance is switched off, unplugged and cool.
- Gently slide the magnetic filter away from the appliance. Then using a soft brush, clean any hair and other debris from the filter. Ensure to reattach the filter once cleaning is complete.

WARRANTIES

1. In this warranty document ("Warranty Document"), "Conair", "we" or "us" means:
 - Conair Australia Pty Limited (ABN 64 068 492 044) of The Equinox Centre, Suite 101, 18 Rodborough Rd, Frenchs Forest, NSW, 2086, in relation to products purchased in Australia; or Conair New Zealand Ltd of Conair New Zealand Limited, PO BOX 251159 Pakuranga, Auckland 2140, New Zealand in relation to products purchased in New Zealand.
 - Nothing in this Warranty Document limits or reduces (or purports to limit or reduce) any statutory guarantees pursuant to the Australian Consumer Law for Australian customers or the Consumer Guarantees Act 1993 for New Zealand customers.
 - If you have any questions about the product you have purchased in either Australia or New Zealand, please contact us on 1800 650 263 (for Australian customers) or 0800 266 247 (for New Zealand customers). Further contact details are set out at the bottom of this Warranty Document.

STANDARD 3 YEAR (36MONTH) WARRANTY

2. **AUSTRALIA:** Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

NEW ZEALAND: Our goods come with guarantees that cannot be excluded under the Consumer Guarantees Act 1993. This guarantee applies in addition to the conditions and guarantees implied by that legislation.

3. Conair's name, postage address, email and phone number are available at the bottom of this Warranty Document, under "Contact Information".
4. This Standard 3 Year (36 Month) Warranty ("Standard Warranty") applies for a period of 3 years (36 months) from the date that you purchased your product ("Standard Warranty Period"). For clarity, the relevant defect must appear within the Standard Warranty Period timeframe for this Standard Warranty to apply.
5. If your product is defective, and the product is covered under this Standard Warranty, you should, in the first instance, take the product back to the place you purchased it from or contact us directly if you are unable to take the product back to the place of purchase. The procedure for claiming under this Standard Warranty is as detailed below.
6. To make a Standard Warranty claim, you will need to return the defective product back to the place it was purchased where it will be assessed under this Standard Warranty. Or if you are unable to return the defective product back to the place of purchase, you will need to call our Customer Service team on 1800 650 263 (for Australian Customers) or 0800 266 247 (for New Zealand customers) or send an email to the email address provided below under 'Contact Information'.
7. In order to make a claim under this Standard Warranty, you will need to provide the following details to Conair:
 1. Date of purchase
 2. Retailer name & location
 3. Product model number & name
 4. Confirm you have your purchase receipt
 5. Detail the problem with your product.

8. If you make a Standard Warranty claim directly with us, we will ask for you to send us back the defective product along with the purchase receipt. To do this, please head to your local post office and send to the product to our reply paid address which is: Reply Paid 146, PO Box 146, Terrey Hills NSW 2084. For clarity, we will be responsible for covering the cost of postage to the above reply paid address.
9. Once we receive your product, we assess it accordingly. Upon analysing the defect, we will either: a) have the product replaced and sent back to you; or b) refund you (either in part or in full).
10. The benefits provided to you under this Standard Warranty are in addition to other rights and remedies available to you under consumer law.
11. Within the Standard Warranty Period, if your product suffers a defect in the materials or workmanship, Conair will either refund or replace your product, in our sole discretion, for no charge.
12. Under this Standard Warranty, we do not have to refund, repair or replace your product if the product's defect or damage is a result of misuse, abuse, accident, act of God such as lightning, or nonobservance of Conair's instruction booklet on the part of the user.
13. The Standard Warranty does not cover ordinary wear and tear of the product.
14. This Standard Warranty is immediately void if: a) any serial number or product plate is removed or defaced, or b) the product has been serviced or otherwise repaired by a person not authorised to do so by Conair or where non-approved replacement parts are used.
15. You are aware that the product is designed for domestic use only and that it must be connected to the electrical voltage supply as specified in the ratings label located on the product itself and detailed in the product's instruction booklet. The Standard Warranty does not cover defects arising from non-domestic use or use of incorrect voltage supply.
16. This Standard Warranty may only be claimed where proof of original purchase is presented, for example, original receipt or invoice.
17. The Standard Warranty on any replacement product or parts will

expire on the same date that the Standard Warranty Period on the original product expires, as far as the law permits.

18. In order to obtain a remedy under this Standard Warranty, the defect must have occurred during this Standard Warranty Period and you (as the purchaser) bear the onus of proving that fact, and that the defect was not caused by any of the exclusions above.
19. This Standard Warranty does not cover any product purchased from any entity who is not an authorised Conair distributor or reseller. For clarity, all warranties are only enforceable in Australia and New Zealand.
20. To the fullest extent permitted by law, Conair does not accept liability for: a) any loss or damage however suffered, caused by or arising out of any failure to use a product in accordance with Conair's instruction booklet; and b) any indirect, consequential or economic loss or damage however caused.
21. We will be responsible for all postage and freight charges and any other expenses incidental to claiming under the Standard Warranty, however you must send the product back to our Reply Paid address (which is: Reply Paid 146, PO Box 146, Terrey Hills NSW 2084).
22. If your product is defective, and the product is covered by this Standard Warranty, you should take the product back to the place you purchased it from or contact us directly using the contact information provided in the Contact Information section below.
23. To honour the Standard Warranty, you must retain your proof of original purchase, for example, original receipt or invoice and you must present the proof of original to obtain replacement, refund or service under this Standard Warranty, alongside your defective product.
24. You understand that the Standard Warranty may only be claimed where proof of original purchase is presented, i.e. original purchase receipt or invoice. When asked to do so, please provide your proof of original purchase along with the requested information/defective item.

SPARE PARTS

25. Replacement parts may be available for your product. Contact us on the phone or email address provided for more details. Please provide your product name/model number details, date of purchase and part you require.

CONTACT INFORMATION

Conair Australia Pty Ltd

PO Box 146 Terrey Hills
NSW 2084
Customer Service
Australia
1800 650 263

Conair New Zealand Ltd

PO Box 251159 Pakuranga,
Auckland New Zealand 2140
Customer Service
New Zealand
0800 266 247
email: aus_info@conair.com

SAFE DISPOSAL



The  symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

©2026 Conair Australia Pty. Ltd.
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW 2086
Australia

Conair New Zealand Limited
PO BOX 251159
Pakuranga, Auckland 2140
New Zealand

CONTACT US

For advice & tips on your new BaByliss product email us on:
aus_info@conair.com

ANZ CUSTOMER SERVICE

Australia: 1800 650 263
New Zealand: 0800 266 247

www.babyliss.com

AS6400A

IB-25/480