

# ***BaByliss***<sup>®</sup> MEN



## **PRO BEARD EVEN FINISH BEARD TRIMMER**

**Model 7860U**

# ***BaByliss***<sup>®</sup>MEN

## **PRO BEARD - Even Finish Beard Trimmer**

The BaBylissMEN Pro Beard boasts ultra-precise length settings, ranging from 1mm to 12mm perfect for everyday beard maintenance. The protective comb guide to help deliver consistent cutting, whilst removing the guide allows for close cut edging and detailing. Take control of your beard

### **FEATURES**

- Mains or cordless operation for sustained power for flexibility
- Precision honed, stainless steel blades for smooth cutting
- Skin friendly, removeable comb guide that lifts and trims hair for an even result
- 23 cutting lengths for all beard types
- 1-12mm with 0.5mm increments
- Comb guide automatically locks into position to avoid no slipping in use
- Up to 60 minutes of cordless use from only an 8 hour charge
- Hard fabric travel case that keeps the trimmer and accessories safe on the go

### **SAFETY CAUTIONS**

- This appliance should only be used as described within this instruction book. Please retain for reference.

### **IMPORTANT CHILD SAFETY**

**WARNING!** Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.

## **IMPORTANT SAFETY**

- Do not immerse the appliance in water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or if the appliance has been dropped. In the event of damage contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Only use the attachments supplied with this appliance.
- Do not leave the appliance unattended when switched on.
- Do not place the appliance on any surface whilst in operation.
- Special care is required when using the appliance close to the ears, eyes and face.
- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- Careful adult supervision is required when this appliance is used on or near children. Do not use on very young children.
- This appliance should not be used, cleaned or maintained by children. Keep out of reach of children.
- Always ensure that this appliance is kept out of the reach of children at all times, particularly during use and whilst cooling.
- Allow the appliance to cool before storing away.
- This product contains batteries (NiMH rechargeable

2.4V) that are not to be removed from the appliance for charging.

- The batteries in this appliance are non-replaceable by the end user. Only an authorised engineer should perform this task for safety reasons.
- The supply terminals are not to be short circuited.
- For indoor, household, domestic use only.
- For the purposes of recharging the battery, only use the detachable charging supply unit provided with this appliance.
- This product complies fully with all appropriate EU and UK Legislation and the standards relevant to this type and class of appliance. We are an ISO9001:2015 credited company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact the Conair Customer Care Line (refer to «UK After Sales Service» section).

## **INSTRUCTIONS FOR USE**

- Your BaBylissMEN beard trimmer is equipped with NiMH batteries.
- Before using for the first time, the appliance should be fully charged continuously for 8 hours. This initial super-charge ensures optimum power performance to ensure smooth fast trimming every time. Maximum battery capacity will only be reached after 3 charging and discharging cycles.
- A full 8 hours charge will provide approximately 60 minutes of cordless use.
- Ensure the appliance is switched off.

### **Preserving the batteries**

In order to maintain the optimum capacity of the rechargeable batteries, the trimmer should be fully discharged and then recharged for 16 hours every 6 months.

- This applies to whether you are using it with mains or cordless power.

### **Mains Operation**

- Ensure the appliance is switched off.
- Connect the adaptor to the base of the appliance and plug the adaptor into a suitable mains socket.
- The red LED will appear when the adaptor is correctly inserted into the appliance and connected to the mains.
- The appliance is now ready for use.

**NOTE:** The appliance should not be used for longer than 20 minutes when operated from the mains.

### **Cordless Operation**

- Insert the adaptor into the base of the appliance, plug into a suitable mains socket and switch on. The red LED will appear when the adaptor is correctly inserted into the appliance and connected to the mains.

- Once the appliance is fully charged, unplug the adaptor from the mains socket and appliance and prepare for use.

### **Oiling Instructions**

**IMPORTANT!** It is highly recommended before each use to oil the blades with the oil provided. This ensures optimum cutting performance. For the first use you will need to use the oil supplied with the product, unscrew the cap and cut off the very end of the plastic tube with a pair of scissors to release the oil. To oil the blades ensure the unit is switched on. Gently squeeze the oil tube and apply 2 drops of oil onto the blades. Leave the unit on for a further few seconds to allow the oil to thoroughly spread the length of the blades. Switch off the unit and remove any excess oil by gently dabbing with a cloth.

### **Preparation for Use**

- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged.
- Ensure the blades are free from hair and debris and that they are properly oiled (refer to the 'Oiling Instructions' for further information).
- Ensure the appliance is sufficiently charged.
- Use on clean, dry hair that has been combed until tangle free.


### **Using the Length Control Dial**

The length control dial allows you to adjust the comb guide to change the cutting length of your trimmer. You'll need to experiment to find your preferred length, but as a guide, 1mm will give you a very short be a stubble beard and 12mm will be thicker and longer.

- Select a cutting length (1-12mm) using the dial on the front of the trimmer. Turning the dial clockwise will increase the cutting length. Turning it anti-clockwise will decrease the cutting length.
- Once you have selected your desired cutting length, the guide automatically locks into position for a guaranteed, even cut.
- Switch the trimmer on by sliding the power button up, the blades will start to move and you can begin trimming.


### Using the trimmer without the comb guide

- The trimmer can also be used for detailing/shaping around the edge of the beard.
- To remove the comb guide, place two fingers either side of the wheel and gently pull to unclick the guide.
- Pull the guide up and away from the trimmer unit.

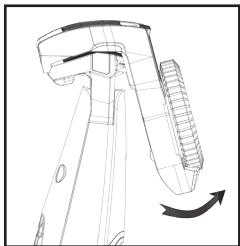

### Attaching the comb guide to the trimmer

- Slide the trimmer head under the back lip of the guide.
- The guide should rest on the head,
- Click the guide into position by gently pressing the wheel against the unit.
- The guide should click into a secure position.

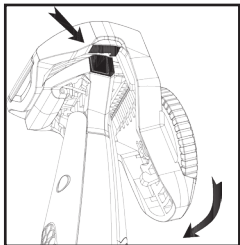

### Cutting performance

- Use on clean, dry hair.
- If possible, when using for the first time, try and grow your facial hair for at least 3 days before cutting. This will give you a better result, as your facial hair will feel thicker.
- Set the cutting length as required.
- It is always best to start cutting with a longer length first, then trim again if the length is longer than desired.
- Hold the trimmer against the hair. Where possible try to hold the trimmer at 90° to the face for best results.
- Move the trimmer upwards through the hair, a little at a time, against the direction of hair growth.
- The beard trimmer will work most effectively when cutting through the hair at its own speed – never force through the hair. You may experience a little resistance when trimming the moustache area, where hair is thicker and grows in many different directions.
- Never switch the trimmer off whilst in the hair.

## CLEANING AND MAINTENANCE

To maintain optimum performance, the appliance should be cleaned after each use:

- Remove the comb guide after use. Rinse the comb guide under running water and dry thoroughly before storage or use.
- Use the cleaning brush supplied to brush away any hair and debris. Do not use a sharp object to clean the trimmer blade.
- The blades can be removed to aid cleaning.
- To remove the blades, hold the handle of the trimmer with one hand, place your thumb underneath the blades and push the blades away from the handle.
- To re-attach the blades, ensure the base of the blade plate is seated in the handle and click into position.
- Gently blow away any hair trapped beneath the blades.
- The blades can be rinsed under the tap.
- Ensure the trimmer blades are dry before re-attaching to the trimmer body.
- After cleaning, switch the appliance on and oil the blades using a few drops of the lubricating oil supplied. Only use the lubricating oil supplied with the appliance as this is specifically formulated for high speed clippers and does not evaporate or slow the blades.



## BATTERY DISPOSAL

This appliance contains Nickel Metal Hydride batteries. To protect the environment this appliance and its batteries must be disposed of safely. At the end of its life, please take this appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.

For more information about the recycling of electrical and battery operated appliances please contact your local council office or your household waste disposal service.

For specific enquiries regarding the replacement of batteries in this product please contact our Conair Customer Care Line – see “UK After Sales Service” section.



## UK GUARANTEE

The Conair Group Ltd, Unit 3, Waterfront Business Park,  
Fleet GU51 3TW

This BaBylissMEN appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only **i.e.** defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange,

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

### Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

- 1.) The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
- 2.) The appliance has been purchased from an unauthorised stockist\*
- 3.) The appliance is used for professional / non domestic usage
- 4.) Repairs or alterations have been attempted by unauthorised persons
- 5.) The failure of the appliance is a direct result of misuse
- 6.) The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

*\*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc*

*Please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail [ukinfo@conair.com](mailto:ukinfo@conair.com) for further information on authorised stockists.*

**It is important to retain your proof of purchase. We recommend attaching your receipt to this page.**

**Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.**

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and **not** from the date of replacement.

**This guarantee is an additional benefit and does not affect your statutory rights as a consumer.**

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail [ukinfo@conair.com](mailto:ukinfo@conair.com)

## **UK AFTER SALES SERVICE**

For further advice on using the appliance, contact the Conair Customer Care Line on 03705 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to [ukinfo@conair.com](mailto:ukinfo@conair.com).

If you should need to return your appliance to us please send it to the following address:

Customer Care Centre  
Conair Logistics  
Unit 4  
Revolution Park  
Buckshaw Avenue  
Buckshaw Village  
Chorley  
PR7 7DW

Please enclose your name and address, together with a copy of proof of purchase and details of the fault.

**Please note this Instruction Booklet is not the guarantee.**

