

# *BaByliss*<sup>®</sup>

## **AIR POWER VOLUME AS95U**

### **SAFETY CAUTIONS**

- Original instructions. Read these safety precautions carefully before using the unit! This appliance should only be used as described within this instruction booklet. Please retain for future reference.

### **WARNING! THIS APPLIANCE GETS HOT!**

- **ALWAYS** keep out of reach of children (during and after use and whilst cooling).
- Always take extra care if used on children or near children.
- Do not use on very young children.

### **IMPORTANT SAFETY**

- **UK Only:** This appliance must not be used in the bathroom.
- **Outside the UK:** If using the appliance in a bathroom, unplug after use as the proximity of water can be dangerous even if the appliance is switched off. For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.



- **WARNING!** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Do not immerse the appliance into water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, discontinue use immediately. Contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the lead is damaged. In the event of damage, discontinue use immediately. If the lead is damaged it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.
- Do not leave the appliance unattended when switched on or plugged in.
- This appliance is equipped with a safety thermostat. In the event of overheating the appliance will either stop automatically or run hot and cold intermittently. Should this happen, switch the appliance to the '0' position, unplug and allow to cool for 10 minutes. Before use, ensure the rear filter is clear of hair and other debris. Plug in and switch on. If the appliance continues to overheat discontinue use immediately, switch off and unplug, and contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Take care that the air vents do not become blocked

when in use. Ensure the rear filter is clear of hair and other debris before use.

- Always ensure that the rear air filter is kept away from hair during use to prevent it being dragged into the fan which may cause the appliance to overheat.
- Take care using this appliance when wearing jewellery, in particular necklaces and earrings to avoid entanglement.
- Take care to avoid the hot surface of the appliance coming into direct contact with the skin, in particular the ears, eyes, face and neck.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand, the hazards involved. Children shall not play with the appliance. Cleaning and maintenance shall not be made by children without supervision.
- Allow the appliance to cool before storing away.
- After use, do not coil the lead around the appliance as this may cause damage to the lead. Instead, coil the lead loosely by the side of the appliance.
- Do not use any accessories other than those recommended by BaByliss.
- Always unplug the appliance when not in use or before cleaning.
- This product complies fully with all appropriate EU and UK Legislation and the Standards relevant to this

type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact the Conair Customer Care Line. (See 'UK After Sales Service' section for further information).

## **INSTRUCTIONS FOR USE**

- Ensure hair is towel dried and combed through to remove excess water and any tangles. Divide the hair into sections ready for drying / styling.
- Slide the switch to the heat/airflow setting suitable for your hair type to turn on the appliance.
- After use, slide the switch to the '0' position to switch off and unplug the appliance.
- Allow the appliance to cool before storing away.

## **USING WET AND DRY MODE**

### **Wet Mode - for use on wet hair**

- For first use, the styler will be set to wet mode '6'. The warm air vents will be open to dry and style the hair. To change the styler mode, please see 'Dry Mode - for use on dry hair' section below.
- In wet mode, air will be released from the entire surface of the dryer for a quick blow dry.
- For best volumising results, place the styler head underneath a section of hair, close to the scalp and hold for a few seconds, allowing the large oval barrel, to add volume at the roots.
- The flexible polishing bristles on the sides of the styler barrel will help to create perfect tension and grip control for quick and easy drying and styling.
- Slowly move the styler down through the hair, as you reach the end of the hair section, rotate the styler slightly towards your face to curl the ends under.
- Repeat for each section of hair.

## **Dry Mode - for use on dry hair**

- To select dry mode, turn the dial on the top of the styler a quarter turn clockwise until you can see the dry mode symbol '🌀' displayed. This will close the air vents for less direct heat on dry hair when needing a style boost.
- In dry mode, air will be released from the flatter straightening plates only for a gentle boost on dry hair.
- For best smoothing results, place the styler head underneath a section of hair, close to the scalp with the fins on the flatter side of the brush pointing up.
- The ceramic smoothing fins on the flatter areas of the brush are perfectly spaced apart to give a smooth finish on all hair types, providing the perfect second day hair refresh.
- Use your free hand to gently pull the hair section taut against the styler head until the fins penetrate the hair.
- Gently glide the styler head through the section creating tension and control through the hair to straighten and smooth.
- As the styler head nears the end of the hair section, rotate the styler under to give shape at the ends.
- Repeat for each section of hair.

## **Anti-Frizz Technology**

Advanced ionic system with negative ions to eliminate frizz and fly-aways and enhance softness and shine.

- To activate the anti-frizz technology, simply press the '🌀' button whilst the styler is on. This will illuminate the ionic blue light at the base of the brush head activating the ion technology.
- For a more matte, textured result, press the '🌀' button, to turn off the anti-frizz technology. The blue light will turn off as a result.
- To tame frizz, for a final touch up of dry hair, select the first setting with the anti-frizz technology activated and gently slide the styler down the hair from root to tip.

## Heat Settings

There are 2 heat settings plus a cool setting. Use the cool setting on warm hair to set your style. Slide the switch to the first position to select the cool setting '❄', the second position for the low heat 'I', and the third position for the high heat 'II'.

If you have delicate, fine, bleached or coloured hair, use the lower heat setting. For thicker hair, use the higher heat setting.

## Heat Protective Glove

**IMPORTANT!** A universal heat protective glove has been supplied to help protect the hand from temporary contact with the barrel when wrapping the hair around the appliance. Please note the heat protective glove is only designed to give initial contact protection. Discomfort will be caused with prolonged contact with the hot surface.

## CARE & MAINTENANCE

To help keep your appliance in the best possible condition, follow the steps below:

- Ensure the appliance is switched off, unplugged and cool. To clean the outside of the appliance, wipe with a damp cloth. Make sure that no water enters the appliance and it is completely dry before use.
- Do not wrap the lead around the appliance, instead coil the lead loosely by the side of the appliance.
- Do not use the appliance at a stretch from the power point.
- Always unplug after use.

## Cleaning the Removable Magnetic Inlet Filter

- To increase the lifespan of your product, it's important to keep the inlet filter clean.
- Ensure the appliance is switched off, unplugged and cool.
- Gently slide the magnetic filter away from the appliance. Then using a soft brush, clean any hair and other debris from the filter. Ensure to reattach the filter once cleaning is complete.

For more information on this appliance visit [www.babyliss.co.uk](http://www.babyliss.co.uk)

## **UK GUARANTEE**

This BaByliss appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only **i.e.** defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

### **Exclusions**

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

- 1.) The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
- 2.) The appliance has been purchased from an unauthorised stockist\*
- 3.) The appliance is used for professional / non domestic usage
- 4.) Repairs or alterations have been attempted by unauthorised persons
- 5.) The failure of the appliance is a direct result of misuse
- 6.) The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

\*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc.

Please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail [ukinfo@conair.com](mailto:ukinfo@conair.com) for further information on authorised stockists.

**It is important to retain your proof of purchase. We recommend attaching your receipt to this page.**

**Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.**

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and **not** from the date of replacement.

**This guarantee is an additional benefit and does not affect your statutory rights as a consumer.**

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail [ukinfo@conair.com](mailto:ukinfo@conair.com)



## **UK AFTER SALES SERVICE**

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail your enquiry to [ukinfo@conair.com](mailto:ukinfo@conair.com)

Return address:


Customer Care Centre  
Conair Logistics  
Unit 4, Revolution Park  
Buckshaw Avenue  
Buckshaw Village  
Chorley  
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

**Please note this Instruction Booklet is not the guarantee.**

## **SAFE DISPOSAL**



The  symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.





