



**SUPER-X METAL SERIES  
15 IN 1 MULTI TRIMMER  
MT992U**


**SAFETY CAUTIONS**

- This appliance should only be used as described within this instruction book. Please retain for reference.


**IMPORTANT CHILD SAFETY**

- **ALWAYS** keep out of the reach of children (during and after use).
- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children.
- Do not use on very young children.

**IMPORTANT SAFETY**

- This appliance can be used in the bath or shower. 
- **UK Only:** Do not charge this appliance in the bathroom.
- **Outside the UK:** If using the appliance in a bathroom, unplug after use as the proximity of water can be dangerous even if the appliance is switched off. For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

**CAUTION:** Keep the power cord and the appliance dry.

- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or if the appliance has been dropped. In the event of damage contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the charging adaptor or lead is damaged. In the event of damage, discontinue use immediately. If the charging adaptor or lead is damaged, it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.
- Only use the attachments supplied with this appliance.
- **WARNING!** For the purposes of recharging the battery, only use the detachable charging supply unit provided with this appliance (CA92). This symbol  indicates there is a detachable power supply for means of charging.
- Do not leave the appliance unattended when switched on.
- Do not place the appliance on any surface whilst in operation.
- Special care is required when using the appliance close to the ears, eyes and face.
- Do not expose the appliance or battery to excessive temperatures.
- Recommended ambient temperature for charging is 5°C to 40°C. Charging outside of this temperature range may cause the battery to leak, generate heat, or result in serious damage. It may also cause the battery's performance and life to deteriorate.
- Be aware of the risk of terminals of the battery-operated appliance or battery being short circuited by metal objects.

- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- This product contains a Lithium Ion rechargeable battery that is not to be removed from the appliance for charging. The batteries in this appliance are non-replaceable. Batteries must be disposed of safely at the end of life. Please take to a recycling centre for safe disposal.
- The supply terminals are not to be short circuited.
- For indoor, household, domestic use only.
- This product complies fully with all appropriate EU and UK Legislation and the standards relevant to this type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact the Conair Customer Care Line (refer to 'UK After Sales Service' section).

## **WEEE - END-OF-LIFE ELECTRICAL AND ELECTRONIC EQUIPMENTS**

- In everybody's interest and to actively participate in protecting the environment and human health:
- Do not discard your products with your unsorted household wastes.
- The WEEE (Waste electrical and electronic equipment) must be collected separately.
- Use the return and collection systems dedicated to the WEEE available in your area. In this way, some materials can

be recycled, re-used or recovered.

- By ensuring this product is disposed of properly, you will help prevent potential negative consequences for the environment and human health due to possible content of hazardous substances.
- For more detailed information about the disposal of this product, please contact your local household waste disposal service.

## **INSTRUCTIONS FOR USE**

**IMPORTANT!** Only use the adaptor and attachments supplied with this appliance.

### **General**

- Always inspect the appliance before use to ensure the trimmer blades are free from hair, debris etc.
- Use on clean, dry hair that has been combed until tangle-free.

### **Oiling Instructions**

- For optimum cutting performance, it is highly recommended to oil the blades after every use.
- When using the oil for the first time, unscrew the cap and cut off the very end of the plastic tube with a pair of scissors.
- Remove the blade guard and switch the appliance on.
- Holding the trimmer at a 45 degree angle, gently squeeze the oil tube and apply 2 drops directly onto the blades.
- Leave the unit on for a further few seconds to allow the oil to thoroughly spread along the length of the blades.
- Switch off the unit and remove any excess oil by gently dabbing with a cloth before using on hair.

### **Charging the appliance**

- This trimmer is equipped with lithium ion batteries.
- Before using for the first time, the appliance should be fully charged

continuously for 3 hours. This initial super-charge ensures optimum power performance to ensure smooth fast trimming every time. Maximum battery capacity will only be reached after 3 charging and discharging cycles.

- Plug the charging adapter into a suitable mains power socket and switch on at the wall. A blue LED light will continuously run up the product to indicate the trimmer is charging. When the battery is fully charged the LED light will stop running up the product and all 5 charging lights will remain alight.

**Note:** Always place the trimmer in the base with the 'I/O' switch in the OFF position.

 
- When the trimmer is running low on charge, the bottom LED charging light will flash to warn there is approximately 15 minutes of battery use remaining. A 3 hour charge will provide 5 hours use. A 20 minute quick charge will provide approximately 40 minutes use.
- If all 5 charging lights start to flash rapidly (more than 4 flashes per second) then the appliance is faulty. If this happens then please stop charging and remove the adapter from the mains and contact the Conair Customer Care Line. (See 'UK After Sales Service' section for further information).

### **Preserving the batteries**

In order to maintain the optimum capacity of the rechargeable batteries, the trimmer should be fully discharged and then recharged for 3 hours every 6 months.

### **Changing the Magnetic Heads**

- Before changing the heads, ensure the appliance is switched off.
- To remove a head, hold the handle of the appliance with one hand, hold the head with the other and simply pull up to release the head from the unit.
- To attach a head, align the slots on the head with the ribs on both sides of the trimmer unit as shown below, until it meets the magnet and is securely held in place.

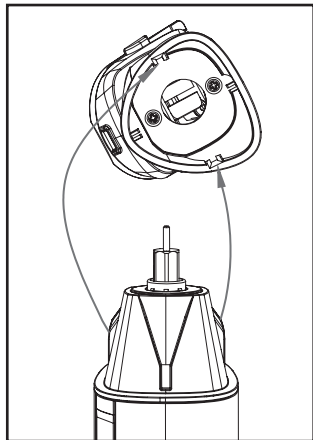

## Comb Guides

This appliance is supplied with 11 comb guides for use with the Precision Trimmer and Power Trimmer blades.

**Note:** The Precision Trimmer and Power Trimmer can be used without any comb guides and will cut to a length of 0.2mm.

### Attaching the comb guides to the trimmer

- Slide the trimmer teeth and the top of the blades into the space under the comb guide. (Fig. 1)
- Click the guide into position by gently pressing the back of the guide down onto the back of the blade. (Fig. 2)
- The comb guide should click under the back of the metal blade.

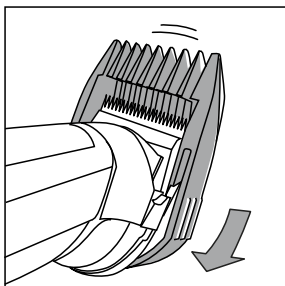 


Fig. 1.


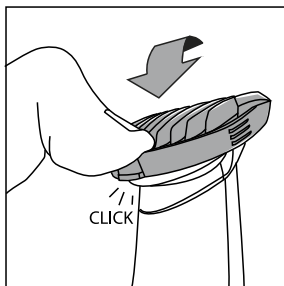 


Fig. 2.

### Using the trimmer without the comb guide

 The Precision Trimmer and Power Trimmer blades can be used to edge and detail or to get a much closer cut (0.2mm).

- To remove the comb guide, squeeze the sides of the comb guide, which will release the back from the blade.
- Lift the guide away.

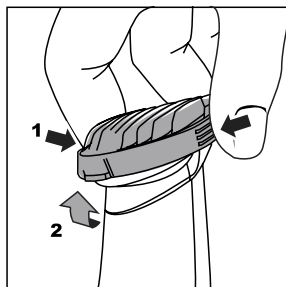

## **Trimming**

### **Using the Precision Trimmer with 6-Position Stubble Comb Guide**

- Attach the 6-position comb guide and select the required length (1-3.5mm).
- Switch the trimmer on.
- Hold the trimmer with the teeth pointing upwards, yet flat against the skin.
- Move the trimmer upwards and outward through the hair, against the direction of hair growth.
- The trimmer will work most efficiently when cutting through hair at its own speed.
- Never switch the appliance off whilst in the hair.

### **Using the Precision Trimmer with the Beard Comb Guides**

- Attach one of the four comb guides (5mm, 6mm, 7mm or 8mm).
- If you require more than one cutting length, start with the longest length first.
- Switch the trimmer on.
- Hold the trimmer with the teeth pointing upwards, yet flat against the skin.
- Move the trimmer upwards and outward through the hair you wish to trim.
- To blend-in a shorter length use a shorter length comb guide and use in the same way as above.
- The trimmer will work most efficiently when cutting through hair at its own speed.
- Never switch the appliance off whilst in the hair.

### **Using the Precision Trimmer with the Body Comb Guides**

- Attach one of the two comb guides (3mm or 4mm).
- If you require more than one cutting length, start with the longest length first.
- Switch the trimmer on.
- Hold the trimmer with the teeth pointing upwards, yet flat against the skin.
- Move the trimmer upwards and outward through the hair, against the direction of hair growth.
- Make sure to be particularly careful when trimming sensitive areas.
- The trimmer will work most efficiently when cutting through hair at its own speed.
- Never switch the appliance off whilst in the hair.

## **Using the Precision Trimmer with 2-Position Eyebrow Comb Guide**

- Attach the 2-position comb guide and select the required length (3mm or 5mm).
- Switch the trimmer on.
- Move the comb guide through the hair you wish to remove following the direction of hair growth until you reach the desired length.
- The trimmer will work most efficiently when cutting through hair at its own speed.
- Never switch the appliance off whilst in the hair.

## **Using the Power Trimmer with the Hair Comb Guides**

### **For an all over even cut:**

- Attach one of the three comb guides (9mm, 12mm or 16mm).
- Switch the trimmer on.
- Starting at the nape of the neck, hold the trimmer with the teeth pointing upwards, ensuring that the comb guide is resting flat against the head.
- Slowly move the trimmer upwards and outwards through the hair towards your crown, against the direction of the hair growth. The comb guide will help to lift the hair and the blades will cut the hair at the desired length.
- Once the desired length is achieved at the back of the hair, start cutting the top and sides.
- Hold the trimmer to the front of your hair with the teeth pointing towards the back of your head, and move the trimmer towards your crown. Repeat as necessary, moving in rows from the front and the sides of your head to the back.
- You should achieve an even length cut all over your head.

### **For a shorter back and sides, with length on the top:**

- Attach one of the three comb guides (9mm, 12mm or 16mm).
- Use a longer length comb guide for the top of your hair.
- Switch the clipper on and the blades will start to move.
- Hold the trimmer to the front of your hair with the teeth pointing towards the back of your head and move the trimmer towards your crown. Repeat as necessary, moving in rows from the front and the sides of your head to the back.
- If you then wish to take the back and sides of your hair to a shorter length, switch off the appliance and attach a shorter comb guide.



- Starting at the nape of the neck, with the comb guide flat against the head, move the trimmer upwards and outwards over the area you want to take shorter.
- Repeat on the sides of the hair, starting with the teeth of the trimmer pointing upwards and comb guide flat against the area above the ear again moving the trimmer upwards and outwards.

## **Outlining**

### **With the Precision Trimmer and Power Trimmer attachments**

- To tidy up the edges around your cut e.g. neckline and sideburns, detach the comb guides.
- Hold the appliance upside down, so the front of the trimmer is facing towards your head.
- Hold the trimmer blades straight on your sideburns or neckline and move the trimmer blades downwards. This will give you a clean, smooth finish.

## **Using the Detail Foil Shaver**

- Finish edges with a smooth, close shave result with the detail foil shaver head attachment.
- Always ensure the foil is not damaged before each use.
- Switch the trimmer on.
- Move the shaver gently over the skin, applying minimal pressure and shave in the direction of hair growth.
- Make sure to be particularly careful when shaving sensitive areas.
- Never switch the appliance off whilst in the hair.

## **Using the Nose & Ear Trimmer**

- For the safe and easy removal of unwanted nose and ear hair use the rotary trimmer head.
- Switch the trimmer on.
- Insert the trimmer into the nose or ear and gently move the trimmer in a circular motion.
- Only use the trimmer at the entrance to the ear or nose. Do not use any deeper, as this could cause injury.
- Never turn the trimmer off whilst in the nose and ear hair.

## Waterproof

The trimmer, attachment heads and comb guides are 100% waterproof and can be used in the shower and bath. Always ensure to clean and allow the trimmer to dry after each use and before storing away. See 'Cleaning & Maintenance' section.

## CLEANING & MAINTENANCE

To maintain optimum performance, the appliance should be cleaned after each use:

- Remove the comb guide after use. Rinse under running water and dry thoroughly before storage or use.
- Remove the trimmer head after use. The heads are washable for easy cleaning. Rinse under running water and dry thoroughly before storage or use.
- Do not disassemble the blades.
- Periodically, it may be necessary to oil the blades. After cleaning, attach a trimmer head, switch on and oil the blades using a few drops of the lubricating oil supplied. Only use the lubricating oil supplied with the appliance as this is specifically formulated for high speed trimmers and does not evaporate or slow the blades.



- For instructions on how to re-attach the head, please refer to 'Changing the Magnetic Heads' section.

## To clean the Detail Foil Shaver attachment

**WARNING! Be careful not to push on the foils, they are delicate and can easily be damaged.**

- Rinse the shaver cutter and foil frame under running water or in a sink. Do not use hot water. Use only warm or cold water.
- After wet cleaning, allow the foil frame and cutters to air-dry before closing the foil frame and shaver head. Replace shaver head back onto the shaver until it clicks into place. Wipe the surface of the main unit with a dry towel. Do not dry the foil area. Let the shaving head air-dry.
- The cutter can also be cleaned with a cleaning brush.
- If the body of the shaver becomes dirty, wipe off with a damp cloth and mild detergent or soap. NEVER use thinners, other solvents or any harsh cleaners.

## CAUTION

1. When shaking off excess water, hold the main unit firmly to prevent releasing the head assembly or dropping the units.
2. Do not use a dryer or heater to dry the shaver. This may result in malfunction or damage to the shaver.

## BATTERY DISPOSAL

This appliance contains Li ion batteries. To protect the environment this appliance and its batteries must be disposed of safely. At the end of its life, please take this appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately. For more information about the recycling of electrical and battery operated appliances please contact your local council office or your household waste disposal service. For specific enquiries regarding the replacement of batteries in this product please contact our Conair Customer Care Line (refer to 'UK After Sales Service' section).

## UK GUARANTEE

This BaByliss appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only **i.e.** defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

## Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd

will not be liable to repair or replace your product where:

- 1.) The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
- 2.) The appliance has been purchased from an unauthorised stockist\*
- 3.) The appliance is used for professional / non domestic usage
- 4.) Repairs or alterations have been attempted by unauthorised persons
- 5.) The failure of the appliance is a direct result of misuse
- 6.) The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

*\*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc.*

*Please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail [ukinfo@conair.com](mailto:ukinfo@conair.com) for further information on authorised stockists.*

**It is important to retain your proof of purchase. We recommend attaching your receipt to this page.**

**Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.**

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and **not** from the date of replacement.

**This guarantee is an additional benefit and does not affect your statutory rights as a consumer.**

If you have any queries regarding this guarantee please contact the Conair

Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday)  
or e-mail [ukinfo@conair.com](mailto:ukinfo@conair.com).

### **UK AFTER SALES SERVICE**

For further advice on using the appliance, contact the Conair Customer Care Line on 03705 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to [ukinfo@conair.com](mailto:ukinfo@conair.com).

If you should need to return your appliance to us please send it to the following address:

Customer Care Centre  
Conair Logistics  
Unit 4  
Revolution Park  
Buckshaw Avenue  
Buckshaw Village  
Chorley  
PR7 7DW

Please enclose your name and address, together with a copy of proof of purchase and details of the fault.

**Please note this Instruction Booklet is not the guarantee.**





