

BaByliss®

SUPER-X METAL SERIES BEARD TRIMMER T992U


SAFETY CAUTIONS

- This appliance should only be used as described within this instruction book. Please retain for reference.

 
IMPORTANT CHILD SAFETY

- **ALWAYS** keep out of the reach of children (during and after use).
- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children.
- Do not use on very young children.

IMPORTANT SAFETY

- This appliance can be used in the bath or shower. 
- **UK Only:** Do not charge this appliance in the bathroom.
- **Outside the UK:** If using the appliance in a bathroom, unplug after use as the proximity of water can be dangerous even if the appliance is switched off. For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- The appliance's adaptor must be kept away from sources of

water so that they do not fall into the water.

- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or if the appliance has been dropped. In the event of damage contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the charging adaptor or lead is damaged. In the event of damage, discontinue use immediately. If the charging adaptor or lead is damaged, it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.
- Only use the attachments supplied with this appliance.
- **WARNING!** For the purposes of recharging the battery, only use the detachable charging supply unit provided with this appliance (CA92). This symbol  indicates there is a detachable power supply for means of charging.
- Do not leave the appliance unattended when switched on.
- Do not place the appliance on any surface whilst in operation.
- Special care is required when using the appliance close to the ears, eyes and face.
- Do not expose the appliance or battery to excessive temperatures.
- Recommended ambient temperature for charging is 5°C to 40°C. Charging outside of this temperature range may cause the battery to leak, generate heat, or result in serious damage. It may also cause the battery's performance and life to deteriorate.
- Be aware of the risk of terminals of the battery-operated

appliance or battery being short circuited by metal objects.

- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- This product contains a Lithium Ion rechargeable battery that is not to be removed from the appliance for charging. The batteries in this appliance are non-replaceable. Batteries must be disposed of safely at the end of life. Please take to a recycling centre for safe disposal.
- The supply terminals are not to be short circuited.
- For indoor, household, domestic use only.
- This product complies fully with all appropriate EU and UK Legislation and the standards relevant to this type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact the Conair Customer Care Line (refer to 'UK After Sales Service' section).

WEEE - END-OF-LIFE ELECTRICAL AND ELECTRONIC EQUIPMENTS

- In everybody's interest and to actively participate in protecting the environment and human health:
- Do not discard your products with your unsorted household wastes.
- The WEEE (Waste electrical and electronic equipment) must be collected separately.
- Use the return and collection systems dedicated to the

WEEE available in your area. In this way, some materials can be recycled, re-used or recovered.

- By ensuring this product is disposed of properly, you will help prevent potential negative consequences for the environment and human health due to possible content of hazardous substances.
- For more detailed information about the disposal of this product, please contact your local household waste disposal service.

INSTRUCTIONS FOR USE

IMPORTANT! Only use the adaptor and attachments supplied with this appliance.

General

- Always inspect the appliance before use to ensure the trimmer blades are free from hair, debris etc.
- Use on clean, dry hair that has been combed until tangle-free.

Oiling Instructions

- For optimum cutting performance, it is highly recommended to oil the blades after every use.
- When using the oil for the first time, unscrew the cap and cut off the very end of the plastic tube with a pair of scissors.
- Remove the blade guard and switch the appliance on.
- Holding the trimmer at a 45 degree angle, gently squeeze the oil tube and apply 2 drops directly onto the blades.
- Leave the unit on for a further few seconds to allow the oil to thoroughly spread along the length of the blades.
- Switch off the unit and remove any excess oil by gently dabbing with a cloth before using on hair.

Charging the appliance

- This trimmer is equipped with lithium ion batteries.
- Before using for the first time, the appliance should be fully charged continuously for 3 hours. This initial super-charge ensures optimum power performance to ensure smooth fast trimming every time. Maximum battery capacity will only be reached after 3 charging and discharging cycles.
- Plug the charging adaptor into a suitable mains power socket and switch on at the wall. A blue LED light will continuously run up the product to indicate the trimmer is charging. When the battery is fully charged the LED light will stop running up the product and all 5 charging lights will remain alight.
- When the trimmer is running low on charge, the bottom LED charging light will flash to warn there is approximately 15 minutes of battery use remaining. A 3 hour charge will provide 5 hours use. A 20 minute quick charge will provide approximately 40 minutes use.
- If all 5 charging lights start to flash rapidly (more than 4 flashes per second) then the appliance is faulty. If this happens then please stop charging and remove the adapter from the mains and contact the Conair Customer Care Line. (See 'UK After Sales Service' section for further information).

Preserving the batteries

In order to maintain the optimum capacity of the rechargeable batteries, the trimmer should be fully discharged and then recharged for 3 hours every 6 months.

Comb Guides

This appliance is supplied with 2 comb guides for use with the beard trimmer.

Note: The trimmer can be used without any comb guide and will cut to a length of 0.2mm.

Attaching the comb guides to the trimmer

- Position the comb guide over the blades. (Fig. 1)
- Click the guide into position by gently pressing the back of the guide down onto the back of the blade. (Fig. 2)

- The comb guide should click under the back of the metal blade.

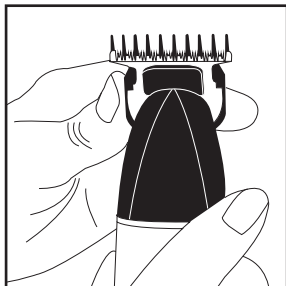 


Fig. 1.

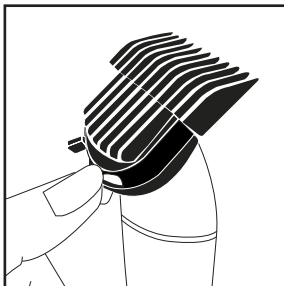 


Fig. 2.

Using the trimmer without the comb guide

The T-blades of the beard trimmer can be used to edge and detail or to get a much closer cut (0.2mm).

- To remove the comb guide, unclip from the bottom of the blade, this will release the comb guide from the trimmer. (Fig. 3)
- Lift the guide away.

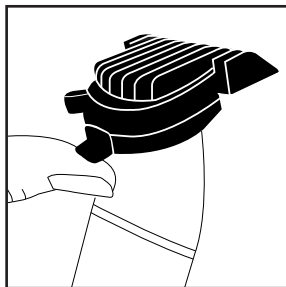 


Fig. 3.

Trimming

Using the Beard Trimmer with the 6-position Stubble or 6-position Beard Comb Guide

- Attach one of the 6-position comb guides and select the required cutting length. Stubble Comb Guide 1-6mm or Beard Comb Guide 7-12mm.
- Switch the trimmer on.
- Hold the trimmer with the teeth pointing upwards, yet flat against the skin.
- Move the trimmer upwards and outward through the hair, against the direction of hair growth.
- The trimmer will work most efficiently when cutting through hair at its own speed.
- Never switch the appliance off whilst in the hair.

Outlining

- To tidy up the edges around your cut e.g. neckline and sideburns, detach the comb guides.
- Hold the appliance upside down, so the front of the trimmer is facing towards your head.
- Hold the trimmer blades straight on your sideburns or neckline and move the trimmer blades downwards. This will give you a clean, smooth finish.

Waterproof

The trimmer and comb guides are 100% waterproof and can be used in the shower and bath. Always ensure to clean and allow the trimmer to dry after each use and before storing away. See 'Cleaning & Maintenance' section.

CLEANING & MAINTENANCE

To maintain optimum performance, the appliance should be cleaned after each use:

- Remove the comb guide after use. Rinse under running water and dry thoroughly before storage or use.
- Use the cleaning brush provided to brush away in hair from the blades.
- Do not disassemble the blades.
- Periodically, it may be necessary to oil the blades. After cleaning, attach a trimmer head, switch on and oil the blades using a few drops of the lubricating oil supplied. Only use the lubricating oil supplied with the appliance as this is specifically formulated for high speed trimmers and does not evaporate or slow the blades.



BATTERY DISPOSAL

This appliance contains Li ion batteries. To protect the environment this appliance and its batteries must be disposed of safely. At the end of its life, please take this appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately. For more information about the recycling of electrical and battery operated appliances please contact your local council office or your household waste disposal service. For specific enquiries regarding the replacement of batteries in this product please contact our Conair Customer Care Line (refer to 'UK After Sales Service' section).

UK GUARANTEE

This BaByliss appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only **i.e.** defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

- 1.) The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
- 2.) The appliance has been purchased from an unauthorised stockist*
- 3.) The appliance is used for professional / non domestic usage

- 4.) Repairs or alterations have been attempted by unauthorised persons
- 5.) The failure of the appliance is a direct result of misuse
- 6.) The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc.

Please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail ukinfo@conair.com for further information on authorised stockists.

It is important to retain your proof of purchase. We recommend attaching your receipt to this page.

Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and **not** from the date of replacement.

This guarantee is an additional benefit and does not affect your statutory rights as a consumer.

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail ukinfo@conair.com.

UK AFTER SALES SERVICE

For further advice on using the appliance, contact the Conair Customer Care Line on 03705 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to ukinfo@conair.com.

If you should need to return your appliance to us please send it to the following address:

Customer Care Centre
Conair Logistics
Unit 4
Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your name and address, together with a copy of proof of purchase and details of the fault.

Please note this Instruction Booklet is not the guarantee.

