

# BaByliss®

## SUPER-X METAL SERIES STUBBLE TRIMMER S996U


### **SAFETY CAUTIONS**

- This appliance should only be used as described within this instruction book. Please retain for reference.

 
### **IMPORTANT CHILD SAFETY**

- **ALWAYS** keep out of the reach of children (during and after use).
- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children.
- Do not use on very young children.

### **IMPORTANT SAFETY**

- This appliance can be used in the bath or shower. 
- **UK Only:** Do not charge this appliance in the bathroom.
- **Outside the UK:** If using the appliance in a bathroom, unplug after use as the proximity of water can be dangerous even if the appliance is switched off. For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

**CAUTION:** Keep the power cord and the appliance dry.

- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or if the appliance has been dropped. In the event of damage contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the charging adaptor or lead is damaged. In the event of damage, discontinue use immediately. If the charging adaptor or lead is damaged, it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.
- Only use the attachments supplied with this appliance.
- **WARNING!** For the purposes of recharging the battery, only use the detachable charging supply unit provided with this appliance (CA92). This symbol  indicates there is a detachable power supply for means of charging.
- Do not leave the appliance unattended when switched on.
- Do not place the appliance on any surface whilst in operation.
- Special care is required when using the appliance close to the ears, eyes and face.
- Do not expose the appliance or battery to excessive temperatures.
- Recommended ambient temperature for charging is 5°C to 40°C. Charging outside of this temperature range may cause the battery to leak, generate heat, or result in serious damage. It may also cause the battery's performance and life to deteriorate.
- Be aware of the risk of terminals of the battery-operated appliance or battery being short circuited by metal objects.

- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- This product contains a Lithium Ion rechargeable battery that is not to be removed from the appliance for charging. The batteries in this appliance are non-replaceable. Batteries must be disposed of safely at the end of life. Please take to a recycling centre for safe disposal.
- The supply terminals are not to be short circuited.
- For indoor, household, domestic use only.
- This product complies fully with all appropriate EU and UK Legislation and the standards relevant to this type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact the Conair Customer Care Line (refer to 'UK After Sales Service' section).

## **WEEE - END-OF-LIFE ELECTRICAL AND ELECTRONIC EQUIPMENTS**

- In everybody's interest and to actively participate in protecting the environment and human health:
- Do not discard your products with your unsorted household wastes.
- The WEEE (Waste electrical and electronic equipment) must be collected separately.
- Use the return and collection systems dedicated to the WEEE available in your area. In this way, some materials can

be recycled, re-used or recovered.

- By ensuring this product is disposed of properly, you will help prevent potential negative consequences for the environment and human health due to possible content of hazardous substances.
- For more detailed information about the disposal of this product, please contact your local household waste disposal service.

## **INSTRUCTIONS FOR USE**

**IMPORTANT!** Only use the adaptor supplied with this appliance.

### **General**

- Always inspect the appliance before use to ensure the trimmer blades are free from hair, debris etc.
- Use on clean, dry hair that has been combed until tangle-free.

### **Oiling Instructions**

- For optimum cutting performance, it is highly recommended to oil the blades after every use.
- When using the oil for the first time, unscrew the cap and cut off the very end of the plastic tube with a pair of scissors.
- Remove the comb guide and switch the appliance on.
- Holding the trimmer at a 45 degree angle, gently squeeze the oil tube and apply 2 drops directly onto the blades.
- Leave the unit on for a further few seconds to allow the oil to thoroughly spread along the length of the blades.
- Switch off the unit and remove any excess oil by gently dabbing with a cloth before using on hair.

### **Charging the appliance**

- This trimmer is equipped with lithium ion batteries.
- Before using for the first time, the appliance should be fully charged continuously for 3 hours. This initial super-charge ensures optimum power performance to ensure smooth fast trimming every time. Maximum

battery capacity will only be reached after 3 charging and discharging cycles.

- Plug the charging adaptor into a suitable mains power socket and switch on at the wall. A blue LED light will continuously run up the product to indicate the trimmer is charging. When the battery is fully charged the LED light will stop running up the product and all 5 charging lights will remain alight.
- When the trimmer is running low on charge, the bottom LED charging light will flash to warn there is approximately 3 minutes of battery use remaining. A 5 minutes charge will provide 3 minutes use. A fully charge will provide approximately 90 minutes use.
- If LED screen display «Er» and all charging lights start to flash rapidly (more than 4 flashes per second) then the appliance is faulty. If this happens then please stop charging and remove the adaptor from the mains and contact the Conair Customer Care Line. (See 'UK After Sales Service' section for further information).

### **Preserving the batteries**



In order to maintain the optimum capacity of the rechargeable batteries, the trimmer should be fully discharged and then recharged for 3 hours every 6 months.

### **Using the comb guide**

- The comb guide allows you to change the cutting length of your trimmer. You'll need to experiment to find your preferred length, but as a guide, 0.4mm will give you very short stubble, whilst 1.6mm will give you a longer stubble look. 2mm+ will give you a short beard.
- Ensure the comb guide is correctly positioned by pushing the comb guide gently downwards to secure into place.
- Use the digital touch control 'up' or 'down' buttons to adjust the telescopic comb guide to the required length.
- The cutting lengths are displayed on the LED screen in 'mm' – scroll through the available length settings with the +/- buttons. There are 24 length settings available: 0.4mm-5.0mm in 0.2mm increments.
- Select your required length – the length setting will then remain displayed on the LED screen.

## Using the trimmer without the comb guide

- Using without the comb guide is ideal for detailing / shaping and general tidying of edges.
- To detach the comb guide, gently hold the trimmer in one hand and with your thumb and index finger positioned at the front of the comb guide (Fig.1). Flip the comb guide to the back of the unit and lock it into position by clicking it securely onto the fastener on the back of the handle (Fig.2).
- Switch the stubble trimmer on and the LED display will illuminate and the blades will start to move.
- If you are looking for an ultra-close finish, you can use the trimmer without the comb guide. This will give you an extremely short cut.

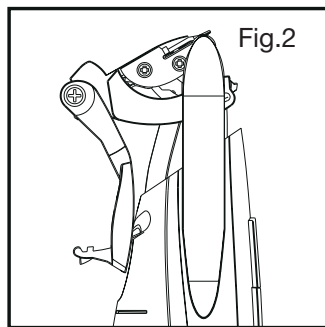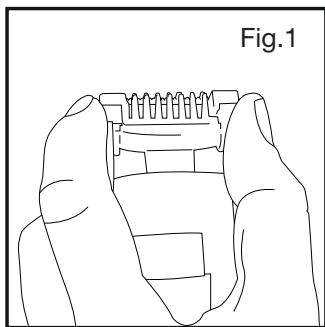

**IMPORTANT:** Please note when using the trimmer without the comb guide, the cutting length will be below 0.4mm. The length setting shown on the LED screen will no longer be relevant when the comb guide is detached.

## Waterproof

The trimmer and comb guides are 100% waterproof and can be used in the shower and bath. Always ensure to clean and allow the trimmer to dry after each use and before storing away. (Refer to 'Cleaning & Maintenance' section for further information).

## Memory Function

The stubble trimmer has a memory function that stores the last chosen length setting. When the unit is switched off the comb guide returns to 0.4mm position. When the trimmer is switched back on the comb guide

automatically moves up to the last chosen length setting.

### **Travel lock feature**

- The stubble trimmer has a travel lock feature which will lock all buttons from activating accidentally.
- To activate the travel lock, press and hold the 'I/O' button until the time display counts down from 3 to 1. When the countdown reaches 1, the lock signal is shown.
- To de-activate the travel lock, press and hold the 'I/O' button until the time display starts to count down from 3 to 1, the motor switches on and starts running. The travel lock is now de-activated.
- When charging for the unit, the travel lock is automatically deactivated.

### **CLEANING & MAINTENANCE**

To maintain optimum performance, the appliance should be cleaned after each use:

- Rinse the comb guide under running water and dry completely before storage or use.
- Use the cleaning brush provided to brush away any hair from the blades.
- Do not disassemble the blades.
- After cleaning, switch on and oil the blades using a few drops of the lubricating oil supplied. Only use the lubricating oil supplied with the appliance as this is specifically formulated for high speed trimmers and does not evaporate or slow the blades.



### **BATTERY DISPOSAL**

This appliance contains Li ion batteries. To protect the environment this appliance and its batteries must be disposed of safely. At the end of its life, please take this appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately. For more information about the recycling of electrical and battery operated appliances please contact your local council office or your household waste disposal service. For specific enquiries regarding the replacement of batteries in this product please contact our Conair Customer Care Line (refer to 'UK After Sales Service' section).

## UK GUARANTEE

This BaByliss appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only **i.e.** defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

## Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

- 1.) The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
- 2.) The appliance has been purchased from an unauthorised stockist\*
- 3.) The appliance is used for professional / non domestic usage
- 4.) Repairs or alterations have been attempted by unauthorised persons
- 5.) The failure of the appliance is a direct result of misuse
- 6.) The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

\*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc.



Please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail [ukinfo@conair.com](mailto:ukinfo@conair.com) for further information on authorised stockists.

**It is important to retain your proof of purchase. We recommend attaching your receipt to this page.**

**Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.**

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and **not** from the date of replacement.

**This guarantee is an additional benefit and does not affect your statutory rights as a consumer.**

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail [ukinfo@conair.com](mailto:ukinfo@conair.com).

## **UK AFTER SALES SERVICE**

For further advice on using the appliance, contact the Conair Customer Care Line on 03705 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to [ukinfo@conair.com](mailto:ukinfo@conair.com).

If you should need to return your appliance to us please send it to the following address:

Customer Care Centre  
Conair Logistics  
Unit 4  
Revolution Park  
Buckshaw Avenue  
Buckshaw Village  
Chorley  
PR7 7DW

Please enclose your name and address, together with a copy of proof of purchase and details of the fault.

**Please note this Instruction Booklet is not the guarantee.**



