

BaByliss[®]

LITHIUM POWER CLIPPER E812U

SAFETY CAUTIONS

- Read these safety precautions carefully before using the unit! This appliance should only be used as described within this instruction booklet. Please retain for future reference.

IMPORTANT CHILD SAFETY

- **ALWAYS** keep out of the reach of very young children (during and after use).
- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children.
- Do not use on very young children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

IMPORTANT SAFETY

- **WARNING!** Do not use this device in a bathtub, shower, or water-filled reservoir.

- Keep the power cord, and the appliance dry and away from all sources of water so that they do not fall into the water. For appliances with a removable power supply unit, remove the power cord before cleaning.
- **UK Only:** Do not use this appliance in the bathroom. 
- **Outside the UK:** If using the appliance in a bathroom, unplug after use as the proximity of water can be dangerous even if the appliance is switched off. For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or if the appliance has been dropped. In the event of damage contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the charging adaptor or lead is damaged. In the event of damage, discontinue use immediately. If the charging adaptor or lead is damaged, it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.
- Only use the accessories supplied with this appliance.
- **WARNING!** To charge the product, only use a certified suitable power supply unit (BaByliss CA92 - part code 62628) with an output rating of 5V, 1A, 5W. Using a non-certified or incorrect power supply unit may cause hazards

or serious injuries.

- The power supply unit is available via www.babylist.co.uk.
- If you need support in finding the correct USB power supply unit, contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Keep the USB cable, USB supply unit and accessories dry.
- **WARNING!** Using a non-certified supply unit may cause hazards or serious injuries.
- For safety reasons, the appliance can therefore only be used without a cord.
- **WARNING!** This symbol  indicates there is a detachable power supply for means of charging (CA92).
- Do not leave the appliance unattended when switched on.
- Do not leave the appliance plugged in for more than 24 hours.
- Unplug immediately if any problems occur during use.
- Do not place the appliance on any surface whilst in operation.
- Special care is required when using the appliance close to the ears, eyes and face.
- Do not expose the appliance or battery to excessive temperatures.
- Recommended ambient temperature for charging is 5°C to 40°C. Charging outside of this temperature range may cause the battery to leak, generate heat, or result in serious damage. It may also cause the battery's performance and life to deteriorate.
- Be aware of the risk of terminals of the battery-operated appliance or battery being short circuited by metal objects.
- This product contains a Lithium Ion rechargeable battery that is not to be removed from the appliance for charging.

The batteries in this appliance are non-replaceable. Batteries must be disposed of safely at the end of life. Please take to a recycling centre for safe disposal. If the battery leaks, avoid touching it and dispose of it at a recycling centre.

- The supply terminals are not to be short circuited.
- For domestic use only.
- This product complies fully with all appropriate EU and UK Legislation and the standards relevant to this type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact the Conair Customer Care Line (refer to 'UK After Sales Service' section).

WEEE - END-OF-LIFE ELECTRICAL AND ELECTRONIC EQUIPMENT

In everybody's interest and to actively participate in protecting the environment and human health:

- Do not discard your products with your unsorted household waste.
- The WEEE (Waste electrical and electronic equipment) must be collected separately.
- Use the return and collection systems dedicated to the WEEE available in your area. In this way, some materials can be recycled, re-used or recovered.

- By ensuring this product is disposed of properly, you will help prevent potential negative consequences for the environment and human health due to possible content of hazardous substances.

For more detailed information about the disposal of this product, please contact your local household waste disposal service.

Recycling Rechargeable Batteries

- Some BaByliss appliances may have rechargeable batteries. Only for the purpose of recycling, these batteries must be removed from the appliance before it is discarded.
- Disconnect the appliance from the mains before removing the batteries.
- Remove the batteries by carefully opening the appliance case using the appropriate tools, then dispose of the batteries at a collection point intended for this purpose.
- Please contact BaByliss for additional information on how to remove the batteries. www.babyliss.com.

INSTRUCTIONS FOR USE

IMPORTANT! Only use the attachments supplied with this appliance.

General

- Always inspect the appliance before use to ensure the clipper blades are free from any hair, debris etc.
- Use on clean, dry hair that has been combed until tangle free.

Oiling Instructions

- For optimum cutting performance, it is highly recommended to oil the blades after every use.
- When using the oil for the first time, unscrew the cap and cut off the very end of the plastic tube with a pair of scissors.
- Remove the blade guard and switch the appliance on.
- Holding the clipper at a 45 degree angle, gently squeeze the oil tube and apply 2 drops directly onto the blades.
- Leave the unit on for a further few seconds to allow the oil to thoroughly spread along the length of the blades.
- Switch off the unit and remove any excess oil by gently dabbing with a cloth before using on hair.

Charging the appliance

- This clipper is equipped with Lithium-ion batteries.
- Before using for the first time, the appliance should be fully charged continuously for 3 hours. This initial super-charge ensures optimum power performance to ensure smooth fast trimming every time. Maximum battery capacity will only be reached after 3 charging and discharging cycles.
- Plug the charging cable into a suitable mains power socket and switch on at the wall. A blue LED light will flash to indicate the clipper is charging. When the battery is fully charged the LED will stop flashing and remain alight.
- When the clipper is running low on charge, the LED charging light will fast flash to warn that there is approximately 5 minutes of battery use left.

- The clipper is equipped with a fast charging function, where a 10 minute charge will provide 10 minutes of use.
- Subsequent charges should be 3 hours.
- A full charge will provide 3 hours of cordless use.

Note: The clipper will not switch on whilst charging.

Note: This product comes with a USB charging cable. If you require an adaptor for the cable, you can order one via our website under 'Spares & Accessories'.

Preserving the batteries

In order to maintain the optimum capacity of the rechargeable batteries, the trimmer should be fully discharged and then recharged for 3 hours every 6 months.

USB Adaptor

A USB charging adaptor is not supplied for this product. If you require one for charging, you can visit www.babyliss.com and enter product code 62628 under the 'Spares & Accessories' section of the website. If you require assistance in locating the adaptor, please contact the Conair Customer Care Line (refer to 'UK After Sales Service') for further information.

WARNING! Using a non-certified supply unit may cause hazards or serious injuries.

Comb Guides

This appliance is supplied with 8 comb guides, each one is labelled:

Cutting Length	Grade
3mm	#1
6mm	#2
9.5mm	#3
13mm	#4
16mm	#5
19mm	#6
22mm	#7
25mm	#8

- To attach a comb guide, ensure the appliance is switched off. Slide the cutting blades of the clipper under the slot in the rear of the teeth of the cutter guide and snap the clip on the bottom of the guide over the bottom edge of the fixed clipper blade.
- To remove the comb guide, ensure the appliance is switched off. Push the tab on the rear of the comb guide away from the head and lift off.

Left and Right Ear Taper Guides

The taper guides can be used above the ear to get a clean line.

- Attach either the left or right guide depending on which ear you are cutting above.
- Angle the clipper and gently stroke around the ear towards the back of the neck.

Taper Control

The taper control lever enables fine cut adjustment for precision clipping. The blade cutting length without a comb guide is 0.8mm.

- To increase the cutting length, push the lever down.
- Each position will increase the length as below:

Taper position 1 - +0.0mm

Taper position 2 - +0.2mm

Taper position 3 - +0.3mm

Taper position 4 - +0.5mm

Taper position 5 - +0.7mm

Clipping

For an all over even cut

- Attach a comb guide as required – your clipper is supplied with 8 standard comb guides, lengths 3-25mm. Each comb guide is labelled.
- Switch the clipper on using the central power button and the blades will start to move.
- Starting at the nape of the neck, hold the clipper with the teeth of the comb guide pointing upwards, ensuring that the comb guide is resting flat against the head.
- Slowly move the clipper upwards and outwards through the hair towards your crown, against the direction of the hair growth. The comb guide will help to lift the hair and the blades will cut the hair at the desired length.
- Once the desired length is achieved at the back of the hair, start clipping the top and sides.
- Hold the clipper to the front of your hair with the teeth pointing towards the back of your head, and move the clipper towards your crown. Repeat as necessary, moving in rows from the front and the sides of your head to the back.
- You should achieve an even length cut all over your head.

For a shorter back and sides, with length on the top

- Attach the longer comb guide as required for the top of your hair – your clipper is supplied with 8 standard comb guides, lengths 3-25mm. Each comb guide is labelled.
- Switch the clipper on using the central power button and the blades will start to move.
- Hold the clipper to the front of your hair with the teeth pointing towards the back of your head and move the clipper towards your crown. Repeat as necessary, moving in rows from the front and the sides of your head to the back.
- If you then wish to take the back and sides of your hair to a shorter length, switch off the appliance and attach a shorter comb guide.
- Starting at the nape of the neck, with the comb guide flat against the head, move the clipper upwards and outwards over the area you want to take shorter.
- Repeat on the sides of the hair, starting with the teeth of the clipper pointing upwards and comb guide flat against the area above the ear, again moving the clipper upwards and outwards.

Outlining

- To tidy up the edges around your cut e.g. neckline and sideburns, detach the comb guides.
- Hold the appliance upside down, so the front of the clipper is facing towards your head.
- Hold the clipper blades straight on your sideburns or neckline and move the clipper blades downwards. This will give you a clean, smooth finish.

CLEANING & MAINTENANCE

- To maintain optimum performance, the appliance should be cleaned after each use.
- Blow away any remaining hair on the blades or use the cleaning brush provided.
- Remove the comb guide. The comb guide can be rinsed under running water. Ensure they are dried thoroughly before storage or further use.
- Do not disassemble the blades.
- Oil the blades after every use to ensure optimum cutting performance.

BATTERY DISPOSAL



To minimise hazards to health and the environment at the end of this product's life, laws dealing with Waste Electrical and Electronic Equipment (WEEE) and The Waste Battery Directive require you to dispose of these products and their batteries at a suitable collection facility where they will be sent for appropriate recycling. Please contact your local authorities for more details on recycling and safe disposal of these in your area.

UK GUARANTEE

This BaByliss appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only **i.e.** defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

- 1.) The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
- 2.) The appliance has been purchased from an unauthorised stockist*
- 3.) The appliance is used for professional / non domestic usage
- 4.) Repairs or alterations have been attempted by unauthorised persons
- 5.) The failure of the appliance is a direct result of misuse
- 6.) The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

**unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc*

Please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail ukinfo@conair.com for further information on authorised stockists.

It is important to retain your proof of purchase. We recommend attaching your receipt to this page.

Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does

not apply if the product was purchased directly from The Conair Group Ltd.

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and **not** from the date of replacement.

This guarantee is an additional benefit and does not affect your statutory rights as a consumer.

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail ukinfo@conair.com

UK AFTER SALES SERVICE

For further advice on using the appliance, contact the Conair Customer Care Line on 03705 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to ukinfo@conair.com.

If you should need to return your appliance to us please send it to the following address:

Customer Care Centre
Conair Logistics
Unit 4
Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your name and address, together with a copy of proof of purchase and details of the fault.

Please note this Instruction Booklet is not the guarantee.

