

# BaByliss®

## BLACK ONYX STYLER ST484U

STANDBY MODE CONSUMPTION	<0,5W
-----------------------------	-------

### **SAFETY CAUTIONS**

- Read these safety precautions carefully before using the unit! This appliance should only be used as described within this instruction booklet. Please retain for future reference.

### **WARNING! BURN HAZARD : THIS APPLIANCE GETS HOT!**

- **ALWAYS** keep out of reach of children (during and after use and whilst cooling).
- Always take extra care if used on children or near children.
- Do not use on very young children.

### **IMPORTANT SAFETY**

- **UK Only:** This appliance must not be used in the bathroom. 
- **Outside the UK:** If using the appliance in a bathroom, unplug after use as the proximity of water can be dangerous even if the appliance is switched off. For additional protection the installation of a residual current device (RCD) with a rated residual operating current

not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

- **WARNING!** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Do not immerse the appliance into water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, discontinue use immediately. Contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the lead is damaged. In the event of damage, discontinue use immediately. If the lead is damaged it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.
- Do not leave the appliance unattended when switched on or plugged in.
- During use, do not place the appliance on any heat sensitive surface, even when using the heat wrap provided.
- **WARNING!** Only hold the handle during use. Do not touch the hot surfaces of the appliance when in use as these can be extremely hot.
- Take care to avoid the hot surface of the appliance

coming into direct contact with the skin, in particular the eyes, ears, face and neck.

- This appliance features an automatic shut-off function and will turn off after 20 minutes. If you wish to continue using the appliance after this time, simply press the button 'ϕ' to turn the power on.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand, the hazards involved. Children shall not play with the appliance. Cleaning and use maintenance shall not be made by children without supervision.
- Allow the appliance to cool before storing away.
- After use, do not coil the lead around the appliance as this may cause damage. Instead, coil loosely by the side of the appliance.
- Do not use any accessories other than those recommended by BaByliss.
- Always unplug the appliance when not in use or before cleaning.
- This product complies fully with all appropriate EU and UK Legislation and the Standards relevant to this type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have

any queries regarding product safety and compliance, please contact the Conair Customer Care Line. (See 'UK After Sales Service' section for further information).

## **INSTRUCTIONS FOR USE**

### **Straightening**

- Ensure hair is dry and combed through.
- Divide the hair into sections.
- Plug in the appliance and press the button marked '⏻' to switch on.
- To select a heat setting suitable for your hair type, press the '+' and '-' buttons. The indicator light will blink until the heat setting selected has been reached. Once the temperature has been reached, the indicator will remain solid in colour.
- Take a section of hair and place it between the styling plates.
- Starting at the root, close the plates applying gentle pressure and glide down the section in one smooth movement.
- If you wish to create shape at the ends of the hair, slightly bend your wrist inwards as you reach the end of each section.
- Repeat as necessary through the remaining sections of hair.
- Allow the hair to cool fully before combing through.

### **Creating Curls**

- Ensure the cool tips are in position at the end of the appliance. (See Fig. 1).



**Fig. 1**

- Plug in the appliance and press the button marked ‘⏻’ to switch on.
- To select a temperature setting suitable for your hair type, press the ‘+’ and ‘-’ buttons. The indicator light will blink until the heat setting selected has been reached. Once the temperature has been reached, the indicator will remain solid in colour.
- Separate a section of hair. The smaller the section the more defined the curl. The larger the section the looser the curl.
- Take the hair section and place between the plates, roughly 3 inches from the roots. (See Fig. 2).
- Holding the appliance handle in one hand and the cool tips in the other turn the appliance 180° back on itself so that the hair is wrapped once around the outside of the appliance. (See Fig. 3).

**WARNING:** Hot surfaces! Do not touch the metal parts of the appliance with fingers. During use, take care not to bring the appliance into contact with the scalp, face, ears or neck.



Fig. 2



Fig. 3

- Slowly glide the appliance along the length of hair from root to tip in a downward motion. (See Fig. 4).
- Release the appliance from the hair.
- To ensure the curl sits neatly in place, hold the end of the section you have curled and twist it in the direction of the curl. (See Fig. 5).



Fig. 4



Fig. 5

## Heat Settings

If you have delicate, fine or coloured hair, use the lower heat settings. For thicker hair, use the higher heat settings. It is suggested to always complete a test on initial use to ensure the correct temperature is used on the hair type. Start on the lowest setting and increase the temperature until desired result is achieved.

Below is a guide of the temperature settings:

Setting 1 (Green) - 130°C

Setting 2 (Yellow) - 160°C

Setting 3 (Orange) - 180°C

Setting 4 (Red) - 210°C

Setting 5 (Red) - 230°C

## Ionic Technology

Turning on the appliance will automatically activate the ionic technology.

**Please note:** The release of the ions from the ports produces a slight buzzing noise.

## Auto Shut Off

This appliance features an automatic shut-off function and will turn off after 20 minutes. To continue using the appliance after this time, simply press the button '⏻' to turn the power on.

## Lockable Plates

This appliance has lockable plates to enable safe and tidy storage of the product when not in use.

- To lock the appliance, after use, hold the handles and press together to close the plates.
- Whilst the plates are closed, use the slide switch with the lock symbol '🔒' located at the base of the appliance to lock the plates.
- To lock, slide the switch towards the plates following the direction of the arrow indicated. To unlock, slide the switch in the opposite direction when ready to use.

## Heat Wrap

The appliance comes with a heat wrap for use during and after styling. During use do not place the appliance on any heat sensitive surface, even when using the heat wrap provided. After use, switch off and unplug the appliance. Immediately wrap the appliance in the heat wrap provided and allow to fully cool down. Continue to keep it out of reach of children as it will remain hot for several minutes.

## CARE & MAINTENANCE

To help keep your appliance in the best possible condition follow the steps below:

- Do not wrap the lead around the appliance, instead coil the lead loosely by the side of the appliance.
- Do not use the appliance at a stretch from the power point.
- Always unplug after use.

For more information on this appliance visit [www.babyliss.co.uk](http://www.babyliss.co.uk)

## UK GUARANTEE

This BaByliss appliance is guaranteed for consumer use for 5 years and is only valid within the United Kingdom.

This guarantee covers consumer use only **i.e.** defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

## **Exclusions**

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

- 1.) The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
- 2.) The appliance has been purchased from an unauthorised stockist\*
- 3.) The appliance is used for professional / non domestic usage
- 4.) Repairs or alterations have been attempted by unauthorised persons
- 5.) The failure of the appliance is a direct result of misuse
- 6.) The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

\*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc

Please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail [ukinfo@conair.com](mailto:ukinfo@conair.com) for further information on authorised stockists.

**It is important to retain your proof of purchase. We recommend attaching your receipt to this page.**

**Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.**

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and **not** from the date of replacement.

**This guarantee is an additional benefit and does not affect your statutory rights as a consumer.**

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail [ukinfo@conair.com](mailto:ukinfo@conair.com)

### **UK AFTER SALES SERVICE**

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail your enquiry to [ukinfo@conair.com](mailto:ukinfo@conair.com)

Return address:

Customer Care Centre  
Conair Logistics  
Unit 4, Revolution Park  
Buckshaw Avenue  
Buckshaw Village  
Chorley  
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

**Please note this Instruction Booklet is not the guarantee.**

## SAFE DISPOSAL



The  symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.



